

SENCOM®

TECHNISCHE QUALITAETSPRODUKTE

Kabeltechnik

REPAIR CABLE KITS

CATALOG 2016



Contents

Universal Wiring kits (pay attention to the specific connector of the Vehicle)	5
Universal Connector Kit (pay attention to the specific connector of the Vehicle)	5
Audi	7
AUDI 80.....	7
AUDI 100.....	7
A3	7
A4	7
A6	8
ALFA ROMEO	8
Universal Connectors Kits Alfa Romeo (pay attention to the specific connector of the Vehicle)	8
GIULIETTA	8
MITO.....	9
147.....	9
BMW.....	9
Serie 1.....	9
Serie 3.....	10
Serie 5.....	10
Z3.....	11
Z4.....	11
X3.....	12
CITROEN	12
Universal Connectors Kits Citroen (pay attention to the specific connector of the Vehicle)	12
C4.....	12
C5.....	12
JUMPER III.....	12
DACIA.....	14
LOGAN MCV	14
FIAT.....	15
Universal Connectors Kits Fiat (pay attention to the specific connector of the Vehicle)	15
DUCATO.....	16
500.....	18
PANDA	18
FIORINO QUBO 225	18
PUNTO	18
DOBLO'	19
FORD.....	19
PUMA	19

GALAXY	19
FOCUS	20
KA	20
S-MAX	20
HYUNDAI.....	20
MERCEDES	21
NISSAN.....	21
MICRA.....	21
NOTE.....	21
OPEL.....	21
Universal Connectors Kits Opel (pay attention to the specific connector of the Vehicle).....	21
AGILA	21
ASTRA	22
CORSA.....	22
MERIVA.....	23
SIGNUM.....	23
VECTRA	23
OMEGA	24
ZAFIRA	24
PEUGEOT	24
BOXER III	24
106.....	26
206.....	26
ROVER.....	27
RENAULT.....	27
Universal Connectors Kits Renault (pay attention to the specific connector of the Vehicle).....	27
CLIO II	28
SCENIC	28
MEGANE	28
SEAT.....	29
ALHAMBRA	29
IBIZA	29
AROSA.....	29
SKODA.....	30
FAVORIT, FORMAN AND FELICIA.....	30
FABIA	30
OCTAVIA	30
ROOMSTER	30
YETI.....	30

VOLVO	31
V40.....	31
VW	31
Universal Connectors Kits VW (pay attention to the specific connector of the Vehicle)	31
BORA.....	31
GOLF II	31
GOLF III	32
GOLF IV	32
GOLF V	33
GOLF V PLUS.....	33
GOLF VI	33
POLO	33
LUPO	34
JETTA	34
PASSAT.....	34
SHARAN	34
TRANSPORTER T4	35
TRANSPORTER T5	35

Universal Wiring kits (pay attention to the specific connector of the Vehicle)



Item Number: 1510010
Model: Seat Alhambra (710), Toledo IV, Mii (KF1), Golf V, Skoda Roomster, etc,...
Repair set wire harness
Installation: Front door left or right
Full occupancy With different colors and cable cross-sections



Item Number: 1510020
Model: Seat Alhambra (710), Toledo IV, Mii (KF1), Golf V, Skoda Roomster, etc,...
Repair set wire harness
Installation: Front door left or right
Preassembled: Heat shrink connectors
Full occupancy With different colors and cable cross-sections



Item Number: 1510030
Model: Seat Alhambra (710), Toledo IV, Mii (KF1), Golf V, Skoda Roomster, etc,...
Repair set wire harness
Installation: Front door left or right
Preassembled: Butt connector
Full occupancy With different colors and cable cross-sections

Universal Connector Kit (pay attention to the specific connector of the Vehicle)



Item Number: 503035
Model: Fiat, Opel, VW, Audi, BMW, Alfa Romeo
Lamp socket for H1 Version With ground line
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503043
Model: Mercedes, Mini, Fiat, Opel, Porsche, Renault, Skoda
Repair set wire harness
Installation: Xenon controller
Preassembled: Heat shrink connectors



Item Number: 503044
Model: VW, Skoda, Audi
Repair set wire harness
Installation: Ignition Coil
Preassembled: Heat shrink connectors



Item Number: 503085
Model: Fiat, Opel, VW, Audi, BMW, Alfa Romeo
Lamp socket for H1 Version Without ground line
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503091
Model: Alfa, Fiat, Lancia, Iveco
Repair set wire harness
Installation: Xenon controller
Preassembled: Heat shrink connectors



Item Number: 503094
Model: VW, Audi, BMW, Fiat, Renault
Lamp plug for H7 PX26d Socket
Replaces OE: 6Y0941855
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503095
Model: VW, Audi, BMW, Fiat, Renault
Ceramics lamp plug for H8 / H11 Halogen Lamp
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503096
Model: VW, Audi, BMW, Fiat, Renault
Ceramics lamp plug for HB3/H10/H12
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503097
Model: VW, Audi, BMW, Fiat, Renault
Ceramics lamp plug for HB4 Halogen Lamp
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503098
Model: VW, Audi, BMW, Fiat, Renault
Ceramics lamp plug for H7 PX26d Socket
Installation: Lighting
Preassembled: Heat shrink connectors



Item Number: 503099
 Model: VW, Audi, BMW, Fiat, Renault
 Ceramics lamp plug for H4 P43t Socket
 Installation: Lighting
 Preassembled: Heat shrink connectors

Item Number: 504026
 Model: Dacia Dokker, Dokker Express, Duster, Lodgy, Logan II, Sandero, Solenza
 Repair set wire harness
 Installation: Glowplug pin terminal
 Preassembled: Heat shrink connectors



Item Number: 503099B
 Model: VW, Audi, BMW, Fiat, Renault
 Lamp plug for H4 P43t Socket
 Installation: Lighting



Item Number: 305200-2
 Model: Fiat, Opel, VW, Audi, BMW, Alfa Romeo
 3 pin connector With silicone cable sealed
 Installation: Different uses
 Preassembled: Heat shrink connectors



Item Number: 305230-2
 Model: Fiat, Opel, VW, Audi, BMW, Alfa Romeo
 4 pin connector With silicone cable sealed
 Installation: Different uses
 Preassembled: Heat shrink connectors



Item Number: 1512560
 Repair set wire harness
 Connection type: Bosch Typ EV1
 Installation: Injector (for Bosch Typ EV1)
 Preassembled: Heat shrink connectors

Item Number: 7620-E03
 Model: Audi A3, A4, A6,A8, Q7, TT, VW, SKODA, SEAT etc.
 Repair set wire harness
 Installation: Headlights
 Preassembled: Heat shrink connectors



Item Number: 305210-2
 Model: Fiat, Opel, VW, Audi, BMW, Alfa Romeo
 2 pin connector With silicone cable sealed
 Installation: Different uses
 Preassembled: Heat shrink connectors

Item Number: GB1915
 Model: Audi, Alfa, BMW, Citroen, VW, Renault
 Cloth tape
 19 mm x 15 m lenght



Item Number: 305240-2
 Model: VW Lupo, Golf 4, Golf 5, Golf 6, Bora, Polo starting from 2000, Pheaton 02-10, Golf Cabrio 98-02, New Beetle+Cabrio, Jetta starting from 2005, Touran, Scirocco starting from 2008.
 2 pin connector With silicone cable sealed
 Installation: Different uses
 Preassembled: Heat shrink connectors

Item Number: WWA01
 Model: VW, Audi, BMW, Fiat, Renault
 Corrugated pipe length 1 Meter including 2 matching connector und 2 heat shrink tube
 Lenght: 1m
 Installation: Rear hatch



Item Number: 7620-E02
 Model: Audi A3, A4, A6,A8, Q7, TT, VW, SKODA, SEAT etc.
 Repair set wire harness
 Installation: Headlights Xenon
 Preassembled: Heat shrink connectors

Item Number: WWA02
 Model: VW, Audi, BMW, Fiat, Renault
 Corrugated pipe length 2.5 Meter including 4 matching connector und 2 heat shrink tube
 Lenght: 2,5m
 Installation: Rear hatch



Item Number: 7620-E06
 Model: Audi A3, A4, A6,A8, Q7, TT, VW, SKODA, SEAT etc.
 Repair set wire harness
 Installation: Headlights
 Preassembled: Heat shrink connectors



Item Number: TS01000
 Model: Citroen, Fiat, Lancia, Peugeot, Renault
 Temperature sensor
 Installation: Mirrors
 Preassembled: Heat shrink connectors

Audi

AUDI 80



Item Number: 1014361
Model: Avant
Repair set wire harness
Year of construction: 09.91 - 01.96
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 1014708
Model: Limousine
Repair set wire harness
Year of construction: 06.86 - 09.91
Installation: Trunk lid
Preassembled: Butt connector
With central locking



Item Number: 1014710
Model: Cabrio
Repair set wire harness
Year of construction: 05.91 - 08.00
Installation: Trunk lid Left
Preassembled: Butt connector
7-wires



Item Number: 1014810
Model: Cabrio
Repair set wire harness
Year of construction: 05.91 - 08.00
Installation: Trunk lid Left
Preassembled: Butt connector
8-wires



Item Number: 1014707
Model: Limousine
Repair set wire harness
Year of construction: 06.86 - 09.91
Installation: Trunk lid
Preassembled: Butt connector
Without central locking



Item Number: 1014709
Model: Limousine
Repair set wire harness
Year of construction: 09.91 - 12.94
Installation: Trunk lid
Preassembled: Butt connector



Item Number: 1014711
Model: Cabrio
Repair set wire harness
Year of construction: 05.91 - 08.00
Installation: Trunk lid Right
Preassembled: Butt connector

AUDI 100



Item Number: 1014562
Repair set wire harness
Year of construction: 12.90 - 12.97
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 1014813
Model: Limousine C4
Repair set wire harness
Year of construction: 06.94 - 10.97
Installation: Trunk lid
Preassembled: Butt connector

A3



Item Number: 1014211
Model: Limousine
Repair set wire harness
Year of construction: 06.96 - 05.03
Installation: Rear hatch
Preassembled: Butt connector

A4



Item Number: 1014362
Model: Avant
Repair set wire harness
Year of construction: 11.94 - 09.01
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 1014365
Model: Limousine B5
Repair set wire harness
Year of construction: 07.96 - 06.01
Installation: Trunk lid
Preassembled: Butt connector



Item Number: 1014411
 Model: Cabrio
 Repair set wire harness
 Year of construction: 04.02 - 12.05
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 1014706
 Model: Limousine
 Repair set wire harness
 Year of construction: 01-95 - 11.00
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 1014610SC
 Model: (8E2,8E5,B6)
 Repair set wire harness
 Year of construction: 11.00 - 12.04
 Installation: Front doors left and right
 Preassembled: Heat shrink connectors



Item Number: 1014820SC
 Model: (8E2,8E5,B6)
 Repair set wire harness
 Year of construction: 11.00 - 12.04
 Installation: Back doors left and right
 Preassembled: Heat shrink connectors

A6




Item Number: 1014562
 Model: Avant
 Repair set wire harness
 Year of construction: 12.90 - 12.97
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1014563
 Model: Avant
 Repair set wire harness
 Year of construction: 12.97 - 01.05
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1014813
 Model: Limousine C4
 Repair set wire harness
 Year of construction: 06.94 - 10.97
 Installation: Trunk lid
 Preassembled: Butt connector

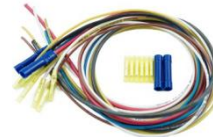

Item Number: 1014455B
 Model: Limousine (4B, C5)
 Repair set wire harness
 Year of construction: 07.97 - 01.05
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 1014620SC
 Model: (4F2, 4F5 C6)
 Repair set wire harness
 Year of construction: 05.04 - 03.11
 Installation: Front doors left and right
 Preassembled: Heat shrink connectors

ALFA ROMEO

Universal Connectors Kits Alfa Romeo (pay attention to the specific connector of the Vehicle)



Item Number: 10105
 Repair set wire harness
 Suitable for the ignition coil Magnetti Marelli
 ART. N.: BAE403B ; BAE403C;
 BAE680BQ.
 Installation: Ignition Coil
 Preassembled: Heat shrink connectors



Item Number: 2016068P
 Repair set wire harness
 Installation: Rail pressure sensor
 Preassembled: Heat shrink connectors
 Specific connector

GIULIETTA



Item Number: 10106
 Repair set wire harness
 Installation: Tail light on rear hatch
 Preassembled: Heat shrink connectors



Item Number: 503015
 Repair set wire harness
 Year of construction: 04.10 -
 Installation: Rear hatch right
 Preassembled: Butt connector



Item Number: 503016
 Repair set wire harness
 Year of construction: 04.10 -
 Installation: Rear hatch left
 Preassembled: Butt connector



Item Number: 503028
 Repair set wire harness
 Year of construction: 04.10 -
 Installation: Rear door left and right
 Numbered wires



Item Number: ANT01
 Repair kit Coaxial (Antenna)
 Year of construction: 04.10 -
 Installation: Rear hatch right
 Preassembled: Fakra Connector
 5,5 m; OE: 50525312

MITO



Item Number: 503017
 Repair set wire harness
 Year of construction: 09.08 -
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 503019
 Repair set wire harness
 Year of construction: 09.08 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503017-A
 Model: Typ 955
 Repair kit Coaxial (Antenna)
 Year of construction: 09.08 -
 Installation: Rear hatch
 Preassembled: FME Connector

147



Item Number: 504025
 Repair set wire harness
 Installation: Tail light left and right
 Preassembled: Heat shrink connectors
 Specific connector



Item Number: 504028
 Repair set wire harness
 Installation: Seat heating
 Preassembled: Heat shrink connectors
 Specific connector

BMW

Serie 1



Item Number: 2016070
 Model: (E81 / E87)
 Repair set wire harness
 Year of construction: 09.04 -
 Installation: Rear hatch
 Preassembled: Butt connector

Serie 3



Item Number: 2016036
Model: E36 Limousine
 Repair set wire harness
 Year of construction: 09.90 - 02.98
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016136
Model: E36 Cabrio
 Repair set wire harness
 Year of construction: 03.93 - 04.99
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016046-1T
Model: E46 Touring / Caravan
 Repair set wire harness
 Year of construction: 10.99 - 02.05
 Installation: Rear hatch left
 Preassembled: Butt connector



Item Number: 2016046-2TN
Model: E46 Touring / Caravan
 Repair set wire harness
 Year of construction: 10.99 - 02.05
 Installation: Rear hatch right
 Preassembled: Butt connector, Heat shrink connector
 Numbered wires



Item Number: 2016046
Model: E46 Limousine
 Repair set wire harness
 Year of construction: 02.98 - 02.05
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016046C
Model: E46 Coupé
 Repair set wire harness
 Year of construction: 02.98 - 02.05
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016146
Model: E46 Cabrio
 Repair set wire harness
 Year of construction: 1999 - 2006
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016146C
Model: E46 Compact
 Repair set wire harness
 Year of construction: 06.01 - 02.05
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 2016090
Model: E90 Limousine
 Repair set wire harness
 Year of construction: 09.07 –
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016090-2
Model: E90 Limousine
 Repair set wire harness
 Year of construction: 01.2005 - 09.2007
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016091N
Model: E91 Touring / Caravan
 Repair set wire harness
 Year of construction: 09.05 –
 Installation: Rear hatch right
 Preassembled: Butt connector
 Heat shrink connectors
 Numbered cables



Item Number: 2016091-R
Model: E91 Touring / Caravan
 Repair set wire harness
 Year of construction: 09.05 –
 Installation: Rear hatch left
 Preassembled: Butt connector
 Including coaxial cable

Serie 5



Item Number: 2016034-1
Model: E34 Touring / Caravan
 Repair set wire harness
 Year of construction: 11.91 - 01.97
 Installation: Rear hatch left
 Preassembled: Butt connector



Item Number: 2016034-2
Model: E34 Touring / Caravan
 Repair set wire harness
 Year of construction: 11.91 - 01.97
 Installation: Rear hatch right
 Preassembled: Butt connector



Item Number: 2016039
Model: E39 Limousine
 Repair set wire harness
 Year of construction: 11.95 - 06.03
 Installation: Trunk lid
 Preassembled: Butt connector



Item Number: 2016039T
Model: E39 Touring
 Repair set wire harness
 Year of construction: 01.97 - 05.00
 Installation: Rear hatch right and left
 Preassembled: Butt connector



Item Number: 2016065
Model: E60 Limousine
Repair set wire harness
Year of construction: 07.03 - 03.10
Installation: Trunk lid
Preassembled: Butt connector



Item Number: 201606162N
Model: E61 Touring / Caravan
Repair set wire harness SET
Year of construction: 06.04 –
Installation: Rear hatch right and left
Preassembled: Heat shrink connectors, Butt connector
 Numbered wires and specific connector preassembled



Item Number: 2016061
Model: E61 Touring / Caravan
Repair set wire harness
Year of construction: 06.04 –
Installation: Rear hatch right
Preassembled: Butt connector



Item Number: 2016062
Model: E61 Touring / Caravan
Repair set wire harness
Year of construction: 06.04 –
Installation: Rear hatch left
Preassembled: Butt connector



Item Number: 2016061SCM
Model: E61 Touring / Caravan
Repair set wire harness
Year of construction: 06.04 –
Installation: Rear hatch right
Preassembled: Heat shrink connectors
 Double color wires



Item Number: 2016062SCM
Model: E61 Touring / Caravan
Repair set wire harness
Year of construction: 06.04 –
Installation: Rear hatch left
Preassembled: Heat shrink connectors
 Double color wires



Item Number: 2016061N
Model: E61 Touring / Caravan
Repair set wire harness
Year of construction: 06.04 –
Installation: Rear hatch right
Preassembled: Heat shrink connectors, Butt connector
 Numbered wires and specific connector preassembled



Item Number: 2016062N
Model: E61 Touring / Caravan
Repair set wire harness
Year of construction: 06.04 –
Installation: Rear hatch left
Preassembled: Heat shrink connectors, Butt connector
 Numbered wires and specific connector preassembled



Item Number: 2016068K
Model: E61 Touring / Caravan
Expanding rivets hinge
Year of construction: 06.04 –
Installation: Rear hatch right and left



Item Number: ANT0612
Model: E61 Touring / Caravan
Repair kit Coaxial (Antenna)
Year of construction: 06.04 –
Installation: Rear hatch left
Preassembled: Fakra Connector

Z3



Item Number: 2016003
Model: Cabrio
Repair set wire harness
Year of construction: 10.95 - 12.02
Installation: Trunk lid
Preassembled: Butt connector

Z4



Item Number: 2016150
Model: Roadster (E85)
Repair set wire harness
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 2016003B
Model: Coupè
Repair set wire harness
Year of construction: 10.95 - 12.02
Installation: Trunk lid
Preassembled: Butt connector

X3



Item Number: **2016083**
Model: E83
Repair set wire harness
Year of construction: 01.04 -
Installation: Rear hatch
Preassembled: Butt connector

CITROEN

Universal Connectors Kits Citroen (pay attention to the specific connector of the Vehicle)



Item Number: **9915350**
Model: Citroen C2 I, C3 II / III, C4, C5 III
 Break & Limo, DS3, Berlingo III Jumpy III
Repair set wire harness
 OE: 1606248780
Installation: Tail light (angled plug)
Preassembled: Heat shrink connectors



Item Number: **9915350**
Model: Citroen C2 I, C3 II / III, C4, C5 III
 Break & Limo, DS3, Berlingo III Jumpy III
Repair set wire harness
Installation: Heater Blower
Preassembled: Heat shrink connectors

C4



Item Number: **9910001SC**
Model: (5 doors) until ORGA-NR. 10551
Repair set wire harness
Year of construction: 11.04 -
Installation: Trunk lid
Preassembled: Heat shrink connectors



Item Number: **9910002SC**
Model: (3 doors) from ORGA Nr.: 10552
Repair set wire harness
Year of construction: 11.04 -
Installation: Trunk lid
Preassembled: Heat shrink connectors



Item Number: **9910003SC**
Model: (3 doors) until ORGA Nr.: 10551
Repair set wire harness
Year of construction: 11.04 -
Installation: Trunk lid
Preassembled: Heat shrink connectors

C5



Item Number: **9911524**
Repair set wire harness
Year of construction: 03.01 - 08.04
Installation: Rear hatch
Preassembled: Butt connector

JUMPER III



Item Number: **10005**
Repair set wire harness
Installation: Reverse headlights switch
Preassembled: Heat shrink connectors



Item Number: **10006**
Repair set wire harness
Installation: Glowplug pin terminal (short)
Preassembled: Heat shrink connectors
 Short version



Item Number: 10007
 Repair set wire harness
Installation: ABS sensor
Preassembled: Heat shrink connectors



Item Number: 10008
 Repair set wire harness
Installation: Alternator
Preassembled: Heat shrink connectors



Item Number: 10012
 Repair set wire harness
Installation: Throttle
Preassembled: Heat shrink connectors



Item Number: 10014
 Repair set wire harness
Installation: Air mass meter
Preassembled: Heat shrink connectors



Item Number: 10016
 Repair set wire harness
Installation: Heater blower motor
Preassembled: Heat shrink connectors



Item Number: 10018
 Model: Model With 1,3 Multijet Motor
 Repair set wire harness
Installation: Glowplug pin terminal (long)
Preassembled: Heat shrink connectors



Item Number: 10101
 Repair set wire harness
Installation: Tail light
Preassembled: Heat shrink connectors



Item Number: 10102
 Repair set wire harness
Installation: Radiator fan motor
Preassembled: Heat shrink connectors



Item Number: 10103
 Model: 2.3 + 3.0
 Repair set wire harness
Installation: Turbocharger
Preassembled: Heat shrink connectors



Item Number: 10110
 Repair set wire harness
Installation: License plate illumination
Preassembled: Heat shrink connectors



Item Number: 10112
 Adapter cable outside mirrors (GT5 on Fakra connector housing)
Installation: Antenna right



Item Number: 10113
 Adapter cable outside mirrors
Installation: Antenna right



Item Number: 503046
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate right With 270° opening
Preassembled: Heat shrink connectors



Item Number: 503047
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate left With 270° opening
Preassembled: Heat shrink connectors



Item Number: 503048
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate right Without 270° opening
Preassembled: Heat shrink connectors



Item Number: 503049
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate left Without 270° opening
Preassembled: Heat shrink connectors



Item Number: 503051
 Adapter cable
 Year of construction: from 2006 -
Installation: Rear light left



Item Number: 503052
 Adapter cable
 Year of construction: from 2006 -
Installation: Rear light right



Item Number: 503055
 Adapter cable
 Year of construction: from 2006 -
 Installation: Headlights left or right



Item Number: 503060
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503065
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503080
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Wiper Motor
 Preassembled: Heat shrink connectors



Item Number: 503090
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heater blower motor
 Preassembled: Heat shrink connectors
 2 port



Item Number: 504021
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Reversing light switch
 Preassembled: Heat shrink connectors



Item Number: 504022
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Tail light
 Preassembled: Heat shrink connectors
 6 port



Item Number: 504023
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: The engine harness Waterproof



Item Number: 504029
 Repair set wire harness
 Installation: Injector (Bosch System)
 Preassembled: Heat shrink connectors



Item Number: 504030
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Diesel Injector
 Preassembled: Heat shrink connectors



Item Number: 5030130
 Repair set wire harness
 Installation: Control / pressure sensor
 exhaust gas recirculation valve
 Preassembled: Heat shrink connectors



Item Number: 9915340
 Model: Multijet 2.3D
 Adapter cable
 Installation: Throttle

DACIA

LOGAN MCV



Item Number: 9920163
 Repair set wire harness
 Year of construction: 02.07 -
 Installation: Tail light left and right
 Preassembled: Heat shrink connectors

Universal Connectors Kits Fiat (pay attention to the specific connector of the Vehicle)



Item Number: 10004
Model: Fiat Ducato 250, Ducato 244, 230, Fiat 500, Punto 188, Bravo II, Panda, Stilo, Doblo', Delta
Repair set wire harness
Installation: Heater blower -switch and heat resistor
Preassembled: Heat shrink connectors



Item Number: 10013
Model: Fiat Freemount, Doblo'
Repair set wire harness
Installation: Lambda probe
Preassembled: Heat shrink connectors



Item Number: 10105
Repair set wire harness
 Suitable for the ignition coil Magnetti Marelli
 ART. N.: BAE403B ; BAE403C; BAE680BQ.
Installation: Ignition Coil
Preassembled: Heat shrink connectors



Item Number: 10106
Model: CROMA
Repair set wire harness
Installation: Tail light on rear hatch
Preassembled: Heat shrink connectors



Item Number: 10107
Model: Fiat Scudo, Jumpy, Expert until 2006
Repair set wire harness
Installation: Blower motor
Preassembled: Heat shrink connectors



Item Number: 503025
Model: Scudo, Ducato
Repair set wire harness
Installation: Tail light
Preassembled: Heat shrink connectors



Item Number: 503041
Model: Fiat Doblo', Fiorino, Idea, Linea, Panda, Punto, Qubo, Strada, etc.
Repair set wire harness
Installation: Injector Diesel
Preassembled: Heat shrink connectors



Item Number: 504027
Repair set wire harness
Installation: ABS sensor
Preassembled: Heat shrink connectors



Item Number: 504041
Model: Fiat, Iveco
Repair set wire harness
Installation: Alternator
Preassembled: Heat shrink connectors



Item Number: 3061165
Model: Fiat BRAVO II (198), CROMA (194), DOBLO' (119), PUNTO / GRANDE PUNTO (199), SEDICI, STILO (192), STILO Multi Wagon (192)
Repair set wire harness
Installation: Injector
Preassembled: Heat shrink connectors



Item Number: 5030120
Model: Fiat Panda, Punto
Repair set wire harness
Installation: Start/Stop System
Preassembled: Heat shrink connectors



Item Number: 5030160
Model: Fiat Fiorino, Qubo
Repair set wire harness
Installation: Intake manifold pressure, fuel pump
Preassembled: Heat shrink connectors



Item Number: 2016068P
Model: Fiat, Alfa Romeo, Lancia
Repair set wire harness
Installation: Rail pressure sensor
Preassembled: Heat shrink connectors



Item Number: 10005
 Repair set wire harness
 Installation: Reverse headlights switch
 Preassembled: Heat shrink connectors



Item Number: 10006
 Repair set wire harness
 Installation: Glowplug pin terminal (short)
 Preassembled: Heat shrink connectors
 Short version



Item Number: 10007
 Repair set wire harness
 Installation: ABS sensor
 Preassembled: Heat shrink connectors



Item Number: 10008
 Repair set wire harness
 Installation: Alternator
 Preassembled: Heat shrink connectors



Item Number: 10012
 Repair set wire harness
 Installation: Throttle
 Preassembled: Heat shrink connectors



Item Number: 10014
 Repair set wire harness
 Installation: Air mass meter
 Preassembled: Heat shrink connectors



Item Number: 10016
 Repair set wire harness
 Installation: Heater blower motor
 Preassembled: Heat shrink connectors



Item Number: 10018
 Model: Model With 1,3 Multijet Motor
 Repair set wire harness
 Installation: Glowplug pin terminal (long)
 Preassembled: Heat shrink connectors



Item Number: 10101
 Repair set wire harness
 Installation: Tail light
 Preassembled: Heat shrink connectors



Item Number: 10102
 Repair set wire harness
 Installation: Radiator fan motor
 Preassembled: Heat shrink connectors



Item Number: 10103
 Model: 2.3 + 3.0
 Repair set wire harness
 Installation: Turbocharger
 Preassembled: Heat shrink connectors



Item Number: 10110
 Repair set wire harness
 Installation: License plate illumination
 Preassembled: Heat shrink connectors



Item Number: 10112
 Adapter cable outside mirrors (GT5 on Fakra connector housing)
 Installation: Antenna right



Item Number: 10113
 Adapter cable outside mirrors
 Installation: Antenna right



Item Number: 503046
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Rear gate right With 270° opening
 Preassembled: Heat shrink connectors



Item Number: 503047
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Rear gate left With 270° opening
 Preassembled: Heat shrink connectors



Item Number: 503048
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Rear gate right Without 270° opening
 Preassembled: Heat shrink connectors



Item Number: 503049
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Rear gate left Without 270° opening
 Preassembled: Heat shrink connectors



Item Number: 503051
 Adapter cable
 Year of construction: from 2006 -
 Installation: Rear light left



Item Number: 503052
 Adapter cable
 Year of construction: from 2006 -
 Installation: Rear light right



Item Number: 503055
 Adapter cable
 Year of construction: from 2006 -
 Installation: Headlights left or right



Item Number: 503060
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503065
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503080
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Wiper Motor
 Preassembled: Heat shrink connectors



Item Number: 503090
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heater blower motor
 Preassembled: Heat shrink connectors
 2 port



Item Number: 504021
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Reversing light switch
 Preassembled: Heat shrink connectors



Item Number: 504022
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Tail light
 Preassembled: Heat shrink connectors
 6 port



Item Number: 504023
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: The engine harness Waterproof



Item Number: 504029
 Repair set wire harness
 Installation: Injector (Bosch System)
 Preassembled: Heat shrink connectors



Item Number: 504030
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Injector Diesel
 Preassembled: Heat shrink connectors



Item Number: 5030130
 Repair set wire harness
 Installation: Control / pressure sensor
 exhaust gas recirculation valve
 Preassembled: Heat shrink connectors



Item Number: 9915340
 Model: Multijet 2.3D
 Adapter cable
 Installation: Throttle



Item Number: 10111
Model: 500L
 Repair set wire harness
 Installation: 3 rd Brake light
 Preassembled: Heat shrink connectors



Item Number: 503020C
Model: Cabrio
 Repair set wire harness
 Year of construction: 09.09 -
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 503020
 Repair set wire harness
 Year of construction: 10.07 -
 Installation: Rear hatch
 Preassembled: Butt connector

PANDA



Item Number: 503030
Model: Typ 169
 Repair set wire harness
 Year of construction: 09.03 -
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 503031
Model: Typ 169
 Repair set wire harness
 Year of construction: 09.03 -
 Installation: Bodycomputer
 Preassembled: Heat shrink connectors
 With two wires



Item Number: 503032
Model: Typ 169
 Repair set wire harness
 Year of construction: 09.03 -
 Installation: Bodycomputer
 Preassembled: Heat shrink connectors
 With fuses

FIORINO QUBO 225



Item Number: 503018
Model: (Kasten, Combi)
 Repair set wire harness
 Year of construction: 02.08 -
 Installation: Rear hatch
 Preassembled: Butt connector

PUNTO



Item Number: 10015
Model: Fiat Grande Punto, Evo
 Repair set wire harness
 Installation: Siren
 Preassembled: Heat shrink connectors



Item Number: 10100
Model: Evo until 2012
 Repair set wire harness
 Installation: Tail light (angled plug)
 Preassembled: Heat shrink connectors



Item Number: 503050
Model: Fiat Punto, Evo from 2012
 Repair set wire harness
 Installation: Tail light (Oval)
 Preassembled: Heat shrink connectors



Item Number: 503070
Model: TYP 199
 Repair set wire harness
 Year of construction: 10.05 -
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 503092
 Model: Grande Punto
 Repair set wire harness
 Year of construction: 10.05 -
 Installation: Front door left and right
 Preassembled: Butt connector
 Numbered wires



Item Number: 504025
 Model: Grande Punto
 Repair set wire harness
 Year of construction: 10.05 -
 Installation: Tail light left and right
 Preassembled: Heat shrink connectors
 Specific connector



Item Number: 5030140
 Model: 188
 Repair set wire harness
 Installation: Tail light
 Preassembled: Heat shrink connectors

DOBLO'



Item Number: 10013
 Model: Fiat Freemont, Doblo'
 Repair set wire harness
 Installation: Lambda probe
 Preassembled: Heat shrink connectors



Item Number: 503010
 Model: Kombi (152,163)
 Repair set wire harness
 Installation: Rear hatch
 Preassembled: Butt connector

FORD

PUMA



Item Number: 10014
 Repair set wire harness
 Installation: Air mass meter
 Preassembled: Heat shrink connectors

GALAXY



Item Number: 1512511
 Repair set wire harness
 Year of construction: 05.95 - 04.00
 Installation: Rear hatch
 Preassembled: Butt connector
 Numbered wires



Item Number: 1512511SC
 Repair set wire harness
 Year of construction: 05.95 - 04.00
 Installation: Rear hatch
 Preassembled: Heat shrink connectors
 Numbered wires



Item Number: 1512512
 Repair set wire harness
 Year of construction: 05.00 -
 Installation: Rear hatch
 Preassembled: Butt connector
 Numbered wires



Item Number: 1512512SC
 Repair set wire harness
 Year of construction: 05.00 -
 Installation: Rear hatch
 Preassembled: Heat shrink connectors
 Numbered wires



Item Number: 1512513
 Repair set wire harness
 Year of construction: 05.95 - 04.07
 Installation: Rear door right and left
 Preassembled: Butt connector
 Numbered wires



Item Number: 1512513B
 Repair set wire harness
 Year of construction: 05.95 - 04.07
 Installation: Rear door right and left
 Preassembled: Butt connector; Without bellows



Item Number: 1512514
 Repair set wire harness
 Year of construction: 05.95 - 04.00
 Installation: Front door left and right
 Preassembled: Butt connector
 Numbered wires



Item Number: 1512514B
 Repair set wire harness
 Year of construction: 05.95 - 04.00
 Installation: Front door left and right
 Preassembled: Butt connector; Without bellows



Item Number: 1512515
 Repair set wire harness
 Year of construction: 04.00 - 04.10
 Installation: Front door left and right
 Preassembled: Butt connector
 Numbered wires

FOCUS



Item Number: 9918601
 Model: 1 Turnier
 Repair set wire harness
 Year of construction: 02.99 - 11.04
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 9918602
 Model: (DAW, DBW)
 Repair set wire harness
 Year of construction: 10.98 - 11.04
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 9918601B
 Model: 1 Turnier
 Repair set wire harness
 Year of construction: 02.99 - 11.04
 Installation: Rear hatch
 Preassembled: Butt connector; Without bellows

KA



Item Number: 9918650
 Repair set wire harness
 Year of construction: 10.98 -
 Installation: Rear hatch
 Preassembled: Butt connector

S-MAX



Item Number: 9918605B
 Model: (WA6)
 Repair set wire harness
 Installation: Rear hatch
 Preassembled: Butt connector; Without bellows

HYUNDAI



Item Number: 905010
 Model: Tucson (JM)
 Repair set wire harness
 Year of construction: 08.04 - 03.10
 Installation: Rear hatch
 Preassembled: Butt connector

MERCEDES



Item Number: **6650125**
Model: W124 T-Model
Repair set wire harness
Year of construction: 1986 - 1997
Installation: Rear hatch right
Preassembled: Butt connector




Item Number: **6650410**
Model: E Klasse Limousine
Repair set wire harness
Year of construction: 06.95 - 03.00
Installation: Trunk lid
Preassembled: Butt connector



Item Number: **6650124N**
Model: W124 T-Model
Repair set wire harness
Year of construction: 1986 – 1997
Installation: Rear hatch left
Preassembled: Butt connectors
Numbered wires


NISSAN

MICRA

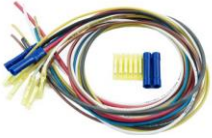

Item Number: **1200**
Model: K11
Repair set wire harness
Year of construction: 01.03 - 06.05
Installation: Rear hatch
Preassembled: Butt connector; Without bellows

NOTE

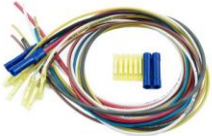

Item Number: **1201**
Model: E11
Repair set wire harness
Year of construction: 03.06 - 07.08
Installation: Rear hatch
Preassembled: Butt connector; Without bellows

OPEL

Universal Connectors Kits Opel (pay attention to the specific connector of the Vehicle)



Item Number: **3061165**
Model: ASTRA H (L48), ASTRA H GTC (L08), ASTRA H
Repair set wire harness
Installation: Injector
Preassembled: Heat shrink connectors

AGILA



Item Number: **3061710B**
Model: Agila A
Repair set wire harness
Year of construction: 09.00
Installation: Rear hatch
Preassembled: Butt connector

ASTRA



Item Number: 3061160
 Model: Astra H Limousine + Caravan
 Repair set wire harness
 Year of construction: 2004 - 2009
 Installation: Passenger door
 Preassembled: Butt connector; Without bellows



Item Number: 3061160-1
 Model: Astra H Limousine + Caravan
 Repair set wire harness
 Year of construction: 2004 - 2009
 Installation: Passenger door
 Preassembled: Butt connector



Item Number: 3061306
 Model: Astra F Caravan Standard
 Repair set wire harness
 Year of construction: 09.91 - 01.98
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 3061309
 Model: Astra F Caravan full equipment
 Repair set wire harness
 Year of construction: 09.91 - 01.98
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 3061326
 Model: Astra G Limousine
 Repair set wire harness
 Year of construction: 02.98 - 02.04
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 3061336
 Model: Astra G Caravan
 Repair set wire harness
 Year of construction: 02.98 - 06.04
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 3061503
 Model: Astra G
 Repair set wire harness
 Year of construction: 02.98 - 06.04
 Installation: Passenger door
 Preassembled: Butt connector; Without bellows
 Without central locking system, without electrical windows



Item Number: 3061503-1
 Model: Astra G
 Repair set wire harness
 Year of construction: 02.98 - 06.04
 Installation: Passenger door
 Preassembled: Butt connector
 Without central locking system, without electrical windows



Item Number: 3061504
 Model: Astra G
 Repair set wire harness
 Year of construction: 02.98 - 06.04
 Installation: Passenger door
 Preassembled: Butt connector; Without bellows
 With central locking system, with electrical windows



Item Number: 3061504-1
 Model: Astra G
 Repair set wire harness
 Year of construction: 02.98 - 06.04
 Installation: Passenger door
 Preassembled: Butt connector
 With central locking system, with electrical windows

CORSA



Item Number: 3061180
 Model: Corsa D
 Repair set wire harness
 Year of construction: 07.06 -
 Installation: Passenger door
 Preassembled: Butt connector; Without bellows



Item Number: 3061180-1
 Model: Corsa D
 Repair set wire harness
 Year of construction: 07.06 -
 Installation: Passenger door
 Preassembled: Butt connector



Item Number: 3061301
 Model: Corsa B
 Repair set wire harness
 Year of construction: 03.93 - 09.00
 Installation: Rear hatch
 Preassembled: Butt connector
 Without central locking system



Item Number: 3061302
 Model: Corsa B
 Repair set wire harness
 Year of construction: 03.93 - 09.00
 Installation: Rear hatch
 Preassembled: Butt connector
 With central locking system



Item Number: 3061505
 Model: Corsa C
 Repair set wire harness
 Year of construction: 2000 - 2006
 Installation: Passenger door
 Preassembled: Butt connector; Without bellows
 Without central locking system, Without electrical windows



Item Number: 3061505-1
 Model: Corsa C
 Repair set wire harness
 Year of construction: 2000 - 2006
 Installation: Passenger door
 Preassembled: Butt connector
 Without central locking system, without electrical windows



Item Number: 3061312
Model: Corsa C
 Repair set wire harness
Year of construction: 09.00 - 06.06
Installation: Rear hatch
Preassembled: Butt connector

MERIVA



Item Number: 3061507
Model: Meriva
 Repair set wire harness
Year of construction: 05.03 -
Installation: Passenger door
Preassembled: Butt connector; Without bellows
 Without electrical windows, Without central locking system



Item Number: 3061507-1
Model: Meriva
 Repair set wire harness
Year of construction: 05.03 -
Installation: Passenger door
Preassembled: Butt connector
 Without electrical windows, Without central locking system



Item Number: 3061508
Model: Meriva
 Repair set wire harness
Year of construction: 05.03 -
Installation: Passenger door
Preassembled: Butt connector; Without bellows
 With electrical windows, with central locking system



Item Number: 3061508-1
Model: Meriva
 Repair set wire harness
Year of construction: 05.03 -
Installation: Passenger door
Preassembled: Butt connector
 With electrical windows, with central locking system



Item Number: 3061322
 Repair set wire harness
Year of construction: 05.03 - 05.10
Installation: Rear hatch
Preassembled: Butt connector

SIGNUM



Item Number: 3061150
 Repair set wire harness
Year of construction: 2003 - 2008
Installation: Passenger door
Preassembled: Butt connector; Without bellows



Item Number: 3061150-1
 Repair set wire harness
Year of construction: 2003 - 2008
Installation: Passenger door
Preassembled: Butt connector

VECTRA



Item Number: 3061140
Model: Vectra C Limousine + Caravan
 Repair set wire harness
Year of construction: 03.02 - 07.08
Installation: Passenger door
Preassembled: Butt connector; Without bellows



Item Number: 3061140-1
Model: Vectra C Limousine + Caravan
 Repair set wire harness
Year of construction: 03.02 - 07.08
Installation: Passenger door
Preassembled: Butt connector



Item Number: 3061311
Model: Vectra B Station Caravan
 Repair set wire harness
Year of construction: 11.96 - 07.03
Installation: Rear hatch
Preassembled: Butt connector

OMEGA



Item Number: 3061310
Model: Omega A Caravan
Repair set wire harness
Year of construction: 09.86 - 05.94
Installation: Rear hatch
Preassembled: Butt connector

ZAFIRA



Item Number: 3061120
Model: Zafira B With Open+Start function
Repair set wire harness
Year of construction: 07.05 -
Installation: Passenger door
Preassembled: Butt connector; Without bellows
With central locking system, with electrical windows



Item Number: 3061130
Model: Zafira B Without Open+Start function
Repair set wire harness
Year of construction: 07.05 -
Installation: Passenger door
Preassembled: Butt connector; Without bellows
With central locking system, with electrical windows



Item Number: 3061501
Model: Zafira A
Year of construction: 04.99 - 06.05
Installation: Passenger door
Preassembled: Butt connector; Without bellows
Without central locking system, without electrical windows



Item Number: 3061502
Model: Zafira A
Year of construction: 04.99 - 06.05
Installation: Passenger door
Preassembled: Butt connector; Without bellows
With central locking system, with electrical windows



Item Number: 3061331
Model: Zafira A
Repair set wire harness
Year of construction: 04.99 - 06.05
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 3061120-1
Model: Zafira B With Open+Start function
Repair set wire harness
Year of construction: 07.05 -
Installation: Passenger door
Preassembled: Butt connector
With central locking system, with electrical windows



Item Number: 3061130-1
Model: Zafira B Without Open+Start function
Repair set wire harness
Year of construction: 07.05 -
Installation: Passenger door
Preassembled: Butt connector
With central locking system, with electrical windows



Item Number: 3061501-1
Model: Zafira A
Year of construction: 04.99 - 06.05
Installation: Passenger door
Preassembled: Butt connector
Without central locking system, without electrical windows



Item Number: 3061502-1
Model: Zafira A
Year of construction: 04.99 - 06.05
Installation: Passenger door
Preassembled: Butt connector
With central locking system, with electrical windows

PEUGEOT

BOXER III



Item Number: 10005
Repair set wire harness
Installation: Reverse headlights switch
Preassembled: Heat shrink connectors



Item Number: 10006
Repair set wire harness
Installation: Glowplug pin terminal (short)
Preassembled: Heat shrink connectors
Short version



Item Number: 10007
 Repair set wire harness
Installation: ABS sensor
Preassembled: Heat shrink connectors



Item Number: 10008
 Repair set wire harness
Installation: Alternator
Preassembled: Heat shrink connectors



Item Number: 10012
 Repair set wire harness
Installation: Throttle
Preassembled: Heat shrink connectors



Item Number: 10014
 Repair set wire harness
Installation: Air mass meter
Preassembled: Heat shrink connectors



Item Number: 10016
 Repair set wire harness
Installation: Heater blower motor
Preassembled: Heat shrink connectors



Item Number: 10018
 Model: Model With 1,3 Multijet Motor
 Repair set wire harness
Installation: Glowplug pin terminal (long)
Preassembled: Heat shrink connectors



Item Number: 10101
 Repair set wire harness
Installation: Tail light
Preassembled: Heat shrink connectors



Item Number: 10102
 Repair set wire harness
Installation: Radiator fan motor
Preassembled: Heat shrink connectors



Item Number: 10103
 Model: 2.3 + 3.0
 Repair set wire harness
Installation: Turbocharger
Preassembled: Heat shrink connectors



Item Number: 10110
 Repair set wire harness
Installation: License plate illumination
Preassembled: Heat shrink connectors



Item Number: 10112
 Adapter cable outside mirrors (GT5 on Fakra connector housing)
Installation: Antenna right



Item Number: 10113
 Adapter cable outside mirrors
Installation: Antenna right



Item Number: 503046
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate right With 270° opening
Preassembled: Heat shrink connectors



Item Number: 503047
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate left With 270° opening
Preassembled: Heat shrink connectors



Item Number: 503048
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate right Without 270° opening
Preassembled: Heat shrink connectors



Item Number: 503049
 Repair set wire harness
 Year of construction: from 2006 -
Installation: Rear gate left Without 270° opening
Preassembled: Heat shrink connectors



Item Number: 503051
 Adapter cable
 Year of construction: from 2006 -
Installation: Rear light left



Item Number: 503052
 Adapter cable
 Year of construction: from 2006 -
Installation: Rear light right



Item Number: 503055
 Adapter cable
 Year of construction: from 2006 -
 Installation: Headlights left or right



Item Number: 503060
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503065
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heat resistor
 Preassembled: Heat shrink connectors



Item Number: 503080
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Wiper Motor
 Preassembled: Heat shrink connectors



Item Number: 503090
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Heater blower motor
 Preassembled: Heat shrink connectors
 2 port



Item Number: 504021
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Reversing light switch
 Preassembled: Heat shrink connectors



Item Number: 504022
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Tail light
 Preassembled: Heat shrink connectors
 6 port



Item Number: 504023
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: The engine harness Waterproof



Item Number: 504029
 Repair set wire harness
 Installation: Injector (Bosch System)
 Preassembled: Heat shrink connectors



Item Number: 504030
 Repair set wire harness
 Year of construction: from 2006 -
 Installation: Injector Diesel
 Preassembled: Heat shrink connectors




Item Number: 5030130
 Repair set wire harness
 Installation: Control / pressure sensor
 exhaust gas recirculation valve
 Preassembled: Heat shrink connectors



Item Number: 9915340
 Model: Multijet 2.3D
 Adapter cable
 Installation: Throttle

106

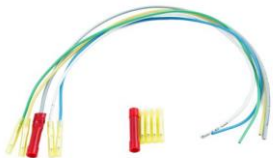

Item Number: 9810755
 Repair set wire harness
 Year of construction: 09.91 - 04.96
 Installation: Rear hatch
 Preassembled: Butt connector

206



Item Number: 9810655
 Repair set wire harness
 Year of construction: 09.98 - 11.01
 Installation: Rear hatch
 Preassembled: Butt connector

ROVER



Item Number: 6650420
Model: 200(RF)
Repair set wire harness
Year of construction: 11.95 - 03.00
Installation: Rear hatch
Preassembled: Butt connector

RENAULT

Universal Connectors Kits Renault (pay attention to the specific connector of the Vehicle)



Item Number: 10109
Model: Kangoo
Repair set wire harness
Installation: Tank flap
Preassembled: Heat shrink connectors



Item Number: 503026
Model: Renault Clio II, Kangoo
Repair set wire harness
Replace OE: 7701057057
Installation: Gas pedal position
Preassembled: Heat shrink connectors



Item Number: 503027
Model: Renault, Laguna Megane Kangoo Scenic Espace IV
Repair set wire harness
Replace OE: 8200764747
Installation: Intake manifold pressure sensor
Preassembled: Heat shrink connectors



Item Number: 503093
Model: Renault Laguna II F9Q 758 Megane II Scenic II F9Q 803 804 818 Motor
Repair set wire harness
Replace OE: 7701479070
Installation: Exhaust gas recirculation valve
Preassembled: Heat shrink connectors



Item Number: 5030100
Model: Renault Scenic III Megane III Grand Scenic III
Repair set wire harness
Installation: Licence plate light
Preassembled: Heat shrink connectors



Item Number: 5030110
Model: Renault GRAND SCÉNIC II, SCÉNIC II
Repair set wire harness
Replace OE: 8200729298
Installation: Resistance heater fan
Preassembled: Heat shrink connectors



Item Number: 5030150
Model: Renault Traffic until 22.06.09, Bus, Kasten
Repair set wire harness
Replace OE: 7701479309
Installation: Fog Tail light



Item Number: 9910500
Model: Renault Renault Clio II, Kangoo I
Repair set wire harness
Installation: Electrical throttle
Preassembled: Heat shrink connectors



Item Number: 9910646
Model: Renault Megane II, Scenic II Grandtour
Repair set wire harness
Installation: Bodycomputer
Preassembled: Heat shrink connectors



Item Number: 9915200
Model: Renault Laguna, Kangoo, Clio, Scenic, Modus,
Adapter cable
Replace OE: 8200673202
Installation: Conversion adapter for pulse generator
Preassembled: Heat shrink connectors



Item Number: 9915300
Model: Renault Laguna, Kangoo, Clio, Scenic, Modus,
Adapter cable
Replace OE: 8200673203
Installation: Conversion adapter for pulse generator
Preassembled: Heat shrink connectors



Item Number: 9915310
Model: Renault Traffic from 2001.
Repair set wire harness
Replace OE: 7701479308
Installation: Fog lights



Item Number: 9915320
Model: ESPACE IV, LAGUNA II, LAGUNA II Grandtour, VEL Satis
 Repair set wire harness
 Replace OE: 8201258720
Installation: Conversion adapter for window lifter
Preassembled: Heat shrink connectors



Item Number: 9915330
Model: CLIO I, CLIO II, CLIO III, KANGOO, KANGOO / GRAND KANGOO, KANGOO BE BOP, KANGOO Express, LAGUNA III, LAGUNA III Grandtour, MEGANE I, MEGANE I Cabriolet, MEGANE I Classic, MEGANE I Coach, MEGANE I Grandtour, MEGANE Scenic, TWINGO I, TWINGO II
 Repair set wire harness
 Replace OE: 8200300322
Installation: Conversion adapter for pulse generator
Preassembled: Heat shrink connectors



Item Number: 9915360
Model: Renault Clio II Laguna II Laguna III Espace IV
 Repair set wire harness
 Replace OE: 8200652822
Installation: Conversion adapter for pulse generator
Preassembled: Heat shrink connectors



Item Number: 9915370
Model: Renault Megane II Megane III Scenic II Scenic III
 Repair set wire harness
 Replace OE: 226256825R
Installation: Control valve
Preassembled: Heat shrink connectors



Item Number: 9918230
Model: Renault Scenic I, Megane
 Repair set wire harness
Installation: Air compressor
Preassembled: Heat shrink connectors



Item Number: 9920164
Model: Renault Kangoo II
 Repair set wire harness
 Year of construction: 02.08 -
Installation: Licence plate light
Preassembled: Heat shrink connectors

CLIO II




Item Number: 9910635
 Repair set wire harness
 Year of construction: 08.99 -
Installation: Rear hatch
Preassembled: Butt connector

SCENIC



Item Number: 9910645
 Repair set wire harness
 Year of construction: 09.99 - 08.03
Installation: Rear hatch
Preassembled: Butt connector

MEGANE

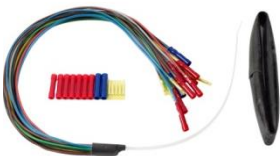

Item Number: 9918606
Model: Grandtour (KM0/1)
 Repair set wire harness
 Year of construction: 08.03 - 08.12
Installation: Rear hatch
Preassembled: Butt connector

SEAT

ALHAMBRA



Item Number: 1512511
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Rear hatch
Preassembled: Butt connector
Numbered wires



Item Number: 1512512
Repair set wire harness
Year of construction: 05.00 -
Installation: Rear hatch
Preassembled: Butt connector
Numbered wires



Item Number: 1512513
Repair set wire harness
Year of construction: 05.95 - 04.07
Installation: Rear door right and left
Preassembled: Butt connector
Numbered wires



Item Number: 1512514
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Front door left and right
Preassembled: Butt connector
Numbered wires



Item Number: 1512515
Repair set wire harness
Year of construction: 04.00 - 04.10
Installation: Front door left and right
Preassembled: Butt connector
Numbered wires



Item Number: 1512511SC
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Rear hatch
Preassembled: Heat shrink connectors
Numbered wires



Item Number: 1512512SC
Repair set wire harness
Year of construction: 05.00 -
Installation: Rear hatch
Preassembled: Heat shrink connectors
Numbered wires



Item Number: 1512513B
Repair set wire harness
Year of construction: 05.95 - 04.07
Installation: Rear door right and left
Preassembled: Butt connector; Without bellows



Item Number: 1512514B
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Front door left and right
Preassembled: Butt connector; Without bellows

IBIZA



Item Number: 5570201
Model: II (6K1)
Repair set wire harness
Year of construction: 03.93 - 08.99
Installation: Rear hatch left
Preassembled: Butt connector



Item Number: 5570202
Model: II (6K1)
Repair set wire harness
Year of construction: 03.93 - 08.99
Installation: Rear hatch right
Preassembled: Butt connector

AROSA



Item Number: 5570500
Model: 6H
Repair set wire harness
Year of construction: 05.97 - 06.04
Installation: Rear hatch
Preassembled: Butt connector

SKODA

FAVORIT, FORMAN AND FELICIA



Item Number: **8882307**
Repair set wire harness
Year of construction: 08.91 - 03.98
Installation: Rear hatch
Preassembled: Butt connector

FABIA



Item Number: **8882310**
Model: 6Y
Repair set wire harness
Year of construction: 08.99 -
Installation: Rear hatch
Preassembled: Butt connector

OCTAVIA



Item Number: **8882311**
Model: Caravan 1U5
Repair set wire harness
Year of construction: 07.98 - 12.10
Installation: Rear hatch
Preassembled: Butt connector



Item Number: **8882312**
Model: Kombi
Repair set wire harness
Year of construction: 07.98 -
Installation: Rear hatch
Preassembled: Butt connector

ROOMSTER



Item Number: **888913**
Model: (5J)
Repair set wire harness
Year of construction: 05.06 -
Installation: Rear hatch
Preassembled: Butt connector



Item Number: **8810450SC**
Repair set wire harness
Installation: Front door left and right
Preassembled: Heat shrink connectors

YETI



Item Number: **888240**
Model: 5L
Repair set wire harness
Year of construction: 05.09 -
Installation: Rear hatch
Preassembled: Butt connector
Numbered wires

VOLVO

V40



Item Number: **9912040**
Repair set wire harness
Year of construction: 07.95 - 06.04
Installation: Rear hatch
Preassembled: Butt connector

VW

Universal Connectors Kits VW (pay attention to the specific connector of the Vehicle)



Item Number: **503045**
Repair set wire harness
Installation: Licence plate light
Preassembled: Heat shrink connectors

BORA



Item Number: **1510415**
Model: Variant
Repair set wire harness
Year of construction: 1999 - 2004
Installation: Rear hatch left
Preassembled: Butt connector



Item Number: **1510415SC**
Model: Variant
Repair set wire harness
Year of construction: 1999 - 2004
Installation: Rear hatch left
Preassembled: Heat shrink connectors



Item Number: **1510416**
Model: Variant
Repair set wire harness
Year of construction: 1999 - 2004
Installation: Rear hatch right
Preassembled: Butt connector



Item Number: **1510416SC**
Model: Variant
Repair set wire harness
Year of construction: 1999 - 2004
Installation: Rear hatch right
Preassembled: Heat shrink connectors



Item Number: **1510410**
Model: Limousine
Repair set wire harness
Year of construction: 08.97 - 09.03
Installation: Trunk lid
Preassembled: Butt connector

GOLF II



Item Number: **1510001**
Repair set wire harness
Year of construction: 08.83 - 10.91
Installation: Rear hatch
Preassembled: Butt connector

GOLF III



Item Number: 1510310
Model: Cabrio
 Repair set wire harness
 Year of construction: 07.93 - 05.98
 Installation: Trunk lid left
 Preassembled: Butt connector



Item Number: 1510311
Model: Cabrio
 Repair set wire harness
 Year of construction: 07.93 - 05.98
 Installation: Trunk lid right
 Preassembled: Butt connector



Item Number: 1510631
Model: Variant
 Repair set wire harness
 Year of construction: 07.93 - 04.99
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1510331
Model: Limousine
 Repair set wire harness
 Year of construction: 11.91 - 08.97
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1510331SC
Model: Limousine
 Repair set wire harness
 Year of construction: 11.91 - 08.97
 Installation: Rear hatch
 Preassembled: Heat shrink connectors



Item Number: 1510631SC
Model: Variant
 Repair set wire harness
 Year of construction: 07.93 - 04.99
 Installation: Rear hatch
 Preassembled: Heat shrink connectors

GOLF IV



Item Number: 1510401
Model: Limousine
 Repair set wire harness
 Year of construction: 08.97 - 06.03
 Installation: Rear hatch left
 Preassembled: Butt connector
 With wash water cable



Item Number: 1510401SC
Model: Limousine
 Repair set wire harness
 Year of construction: 08.97 - 06.03
 Installation: Rear hatch left
 Preassembled: Heat shrink connectors
 With wash water cable



Item Number: 1510402
Model: Limousine
 Repair set wire harness
 Year of construction: 08.97 - 06.03
 Installation: Rear hatch right
 Preassembled: Butt connector



Item Number: 1510402SC
Model: Limousine
 Repair set wire harness
 Year of construction: 08.97 - 06.03
 Installation: Rear hatch right
 Preassembled: Heat shrink connectors



Item Number: 1510405
Model: Variant
 Repair set wire harness
 Year of construction: 1999 - 2006
 Installation: Rear hatch left
 Preassembled: Butt connector



Item Number: 1510405SC
Model: Variant
 Repair set wire harness
 Year of construction: 1999 - 2006
 Installation: Rear hatch left
 Preassembled: Heat shrink connectors



Item Number: 1510406
Model: Variant
 Repair set wire harness
 Year of construction: 1999 - 2006
 Installation: Rear hatch right
 Preassembled: Butt connector



Item Number: 1510406SC
Model: Variant
 Repair set wire harness
 Year of construction: 1999 - 2006
 Installation: Rear hatch right
 Preassembled: Heat shrink connectors

GOLF V



Item Number: 1510502
 Repair set wire harness
 Year of construction: 10.03 - 09.08
 Installation: Rear hatch right
 Preassembled: Heat shrink connectors
 Fakra connector With coaxial cable



Item Number: 1510450SC
 Model: (1K1) (1K5)
 Repair set wire harness
 Year of construction: 10.03 - 11.08
 Installation: Front / rear doors; right and left
 Preassembled: Heat shrink connectors



Item Number: 1510501N
 Repair set wire harness
 Year of construction: 10.03 - 09.08
 Installation: Rear hatch left
 Preassembled: Butt connector
 Numbered wires

GOLF V PLUS



Item Number: 1510600
 Model: (5M1, 521)
 Repair set wire harness
 Year of construction: 01.05 -
 Installation: Rear hatch right
 Preassembled: Heat shrink connectors
 Fakra connector With coaxial cable



Item Number: 1510610
 Model: (5M1, 521)
 Repair set wire harness
 Year of construction: 01.05 -
 Installation: Rear hatch left
 Preassembled: Butt connector
 Numbered wires

GOLF VI



Item Number: 1512550
 Adapter cable
 Installation: Convector for LED

POLO



Item Number: 1510841
 Model: 9N
 Repair set wire harness
 Year of construction: 10.01 -
 Installation: Rear hatch
 Preassembled: Butt connector
 Numbered wires



Item Number: 1511431
 Model: Hatchback
 Repair set wire harness
 Year of construction: 10.81 - 09.89
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1511432
 Model: Hatchback
 Repair set wire harness
 Year of construction: 10.89 - 09.94
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1511526
 Model: Limousine 6N
 Repair set wire harness
 Year of construction: 10.94 - 10.99
 Installation: Rear hatch
 Preassembled: Butt connector



Item Number: 1511602
 Model: Variant GKV5
 Repair set wire harness
 Year of construction: 1997 - 2002
 Installation: Rear hatch left
 Preassembled: Butt connector



Item Number: 1511603
 Model: Variant GKV5
 Repair set wire harness
 Year of construction: 1997 - 2002
 Installation: Rear hatch right
 Preassembled: Butt connector

LUPO



Item Number: 1511201
Repair set wire harness
Year of construction: 09.98 - 07.05
Installation: Rear hatch
Preassembled: Butt connector

JETTA



Item Number: 1510520
Model: III 1K2
Repair set wire harness
Year of construction: 10.05 - 10.10
Installation: Trunk lid
Preassembled: Butt connector



Item Number: 1510530SC
Model: III 1K2
Repair set wire harness
Year of construction: 10.05 - 10.10
Installation: Front or rear doors
Preassembled: Heat shrink connectors

PASSAT



Item Number: 1510203
Model: Limousine B5
Repair set wire harness
Year of construction: 1996 - 2005
Installation: Trunk lid
Preassembled: Butt connector



Item Number: 1512580
Model: Variant 3A5, 351
Repair set wire harness
Year of construction: 04.88 - 05.97
Installation: Rear hatch left
Preassembled: Butt connector

SHARAN



Item Number: 1512511
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Rear hatch
Preassembled: Butt connector
Numbered wires



Item Number: 1512511SC
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Rear hatch
Preassembled: Heat shrink connectors
Numbered wires



Item Number: 1512512
Repair set wire harness
Year of construction: 05.00 -
Installation: Rear hatch
Preassembled: Butt connector
Numbered wires



Item Number: 1512512SC
Repair set wire harness
Year of construction: 05.00 -
Installation: Rear hatch
Preassembled: Heat shrink connectors
Numbered wires



Item Number: 1512513
Repair set wire harness
Year of construction: 05.95 - 04.07
Installation: Rear door right and left
Preassembled: Butt connector
Numbered wires



Item Number: 1512513B
Repair set wire harness
Year of construction: 05.95 - 04.07
Installation: Rear door right and left
Preassembled: Butt connector; Without bellows



Item Number: 1512514
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Front door left and right
Preassembled: Butt connector
Numbered wires



Item Number: 1512514B
Repair set wire harness
Year of construction: 05.95 - 04.00
Installation: Front door left and right
Preassembled: Butt connector; Without bellows



Item Number: 1512515
Repair set wire harness
Year of construction: 04.00 - 04.10
Installation: Front door left and right
Preassembled: Butt connector
Numbered wires

TRANSPORTER T4



Item Number: 1512104
Repair set wire harness
Year of construction: 09.90 - 03.03
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 1512104SC
Repair set wire harness
Year of construction: 09.90 - 03.03
Installation: Rear hatch
Preassembled: Heat shrink connectors



Item Number: 1512105
Repair set wire harness
Year of construction: 09.90 - 04.03
Installation: Front door left (Driver's side)
Preassembled: Butt connector



Item Number: 1512105SC
Repair set wire harness
Year of construction: 09.90 - 04.03
Installation: Front door left (Driver's side)
Preassembled: Heat shrink connectors
Vehicle specific Connectors



Item Number: 1512106
Repair set wire harness
Year of construction: 09.90 - 04.03
Installation: Front door right
Preassembled: Butt connector

TRANSPORTER T5



Item Number: 1512107
Repair set wire harness
Year of construction: 04.03 -
Installation: Front door left and right
Preassembled: Butt connector



Item Number: 1512108
Repair set wire harness
Year of construction: 01.05 -
Installation: Rear hatch
Preassembled: Butt connector



Item Number: 1512109
Repair set wire harness
Year of construction: 04.03 - 12.04
Installation: Rear hatch
Preassembled: Butt connector

SENCom[®]
TECHNISCHE QUALITAETSPRODUKTE
Kabeltechnik
www.sencom-kabeltechnik.de



DISTRIBUTOR

SPEED AUTOTEILE
Automotive Spare Parts · Import – Export
www.speed-autoteile.com

MEMBER
DVSE
DATAPOOL